



The three screws here secure the front control panel.

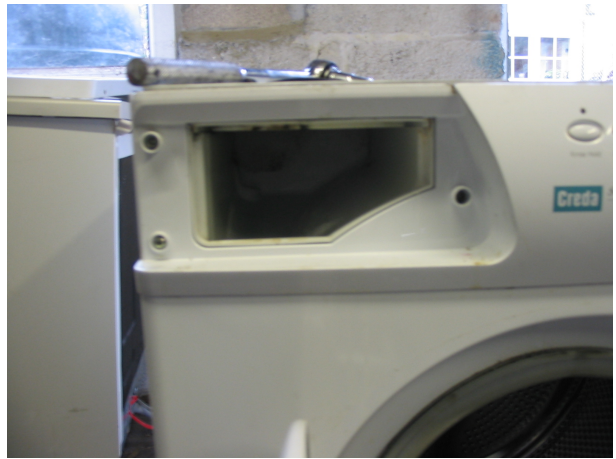

Pull the left hand edge forward a few cm then slide the whole panel to the right to disengage from the lip at the right hand edge.



Lots of wires here – make a note of where they go!

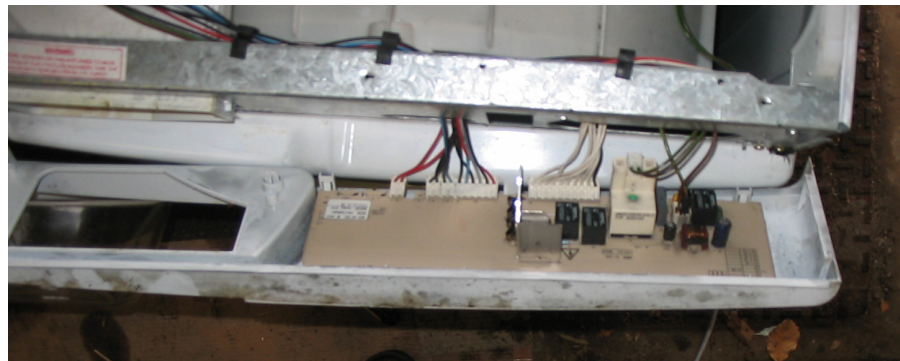

Yours may be different colours to mine ...

