


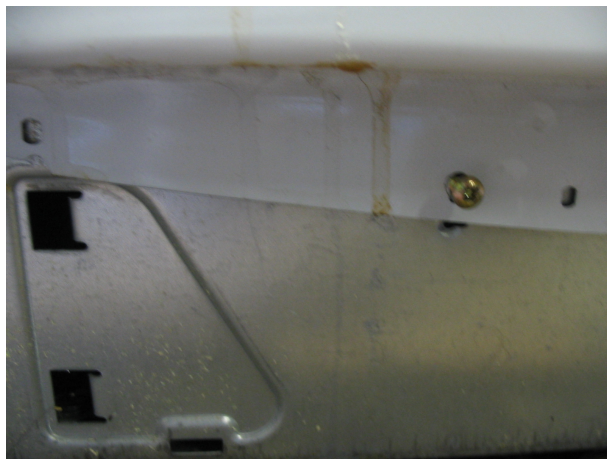

The four screws for the front panel (above) are not in the most obvious holes – but you won't want to put them back in the wrong holes!

The front panel lifts up and off – to disengage from four lugs. This is the top left (looking at the machine from the front).

