


Next remove the door lock. Just leave it hanging. You could, alternatively, remove the wiring plug.

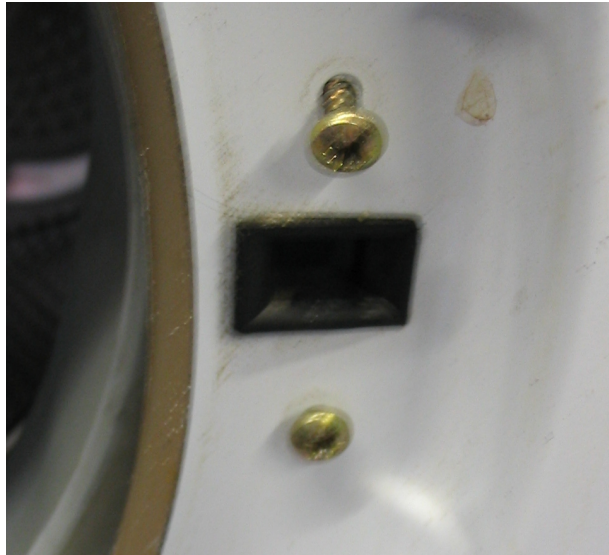

The kick panel just pulls off, revealing two of the front panel screws.



The machine now looks like this.

